




Mounting Suggestions: Honda VT1100 ACE & ACE Tourer 1995-01 Two-Piece Seat

Hardware:

- One Nylon Washer (Included)
- Two 1/4-20 x 3/4" Screws (Included)

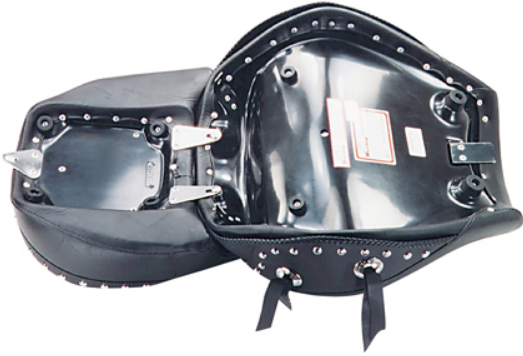

Baseplate Features:

The two-piece seat is built on a marine-grade fiberglass baseplate. Rubber bumpers are positioned to protect the frame and fender. Solos have two powder coated brackets that align with stock side mounts.

Stock Seat Removal Steps

1. Remove rear fender acorn nut with 10 mm wrench.
2. Remove the mounting bolt on each side of the solo seat with a 12 mm socket.
3. Slide seat back and up.



Mounting of Mustang Seat

1. Bolt the solo and rear seat together using the supplied 1/4-20 x 3/4" screws.
2. Engage nose tab under frame below fuel tank, not under fuel tank flange.
3. Place supplied nylon washer between chrome triangle and fender.
4. Set rear fender screw loosely.
5. Install stock side bolts and tighten.
6. Tighten rear fender screw.

Enjoy the Comfort of your new Mustang Seat!



These steps are guidelines to help you install your new Mustang product. If you need further assistance please call us at 800-243-1392, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to questions@mustangseats.com or visit our website at <http://www.mustangseats.com>